



www.for-x.com.tr

Owner's Manuel

DRC-4860
Remote Control Unit







Remote Control (optional)


Press the knob to switch between:


1, VOL : Rotate the knob to increase/decrease the main Volume.


2, SUB VOL : Press and hold knob for 3 sec, then press to enter ,Rotate the knob to increase or decrease SUB Volume.


3,  : Press the knob to switch, return to the start song. Press and hold knob for 3 sec, to go to preset mode.

4,  : Press the knob to switch, Enter to mute mode.

5,  : Press the knob to switch between available input sources.

6,  : Press the knob to switch, select previous song.

7,  : Press the knob to switch, select next song.

8,  : Press the knob to switch, select pause song.

PLAYER Mode. Connect a USB device into the dedicated port. Press the knob to select SOURCE then press the knob to select USB.