

THANK YOU.



[www.for-x.com.tr](http://www.for-x.com.tr)

Owner's Manual

---

***XQ-112RCA***

*Powered RCA Distributor*



## SPECIFICATIONS

All specifications are measured at 14.4VDC (standard automotive voltage).

>Maximum output level	9 V
>Input Sensitivity	300mV-4V
>Frequency response	10Hz-22kHz
>Total harmonic distortion	0.1%
>Power supply	11-15V

## CONGRATULATIONS

We would like to congratulate you on your purchase of the Powered RCA Distributor; a twelve channel, high-performance, Powered RCA Distributor. This unique product will accept two channels of speaker-level signal from a factory-installed amplifier or source unit and convert it to a high quality, low-noise pre-amp signal. Therefore the Powered RCA Distributor will allow you to use your factory installed source unit but give you the ability to add a really good aftermarket amplifier and processor, Whether this is your first product or you are already a firm believer, you will definitely enjoy how great the Powered RCA Distributor can make your performance system sound.


Please read these instructions carefully before beginning to install your new Powered RCA Distributor. Proper installation and adequate tuning will help you to get optimal sound quality results.

## FEATURES

Here are some of the cool features that your Powered RCA Distributor offers:


- >Powered RCA Distributor
- >Signal sensing inputs
- >Level matching controls
- >Remote output
- >12 Channel Output jacks.

## FRONT PANEL CONTROLS

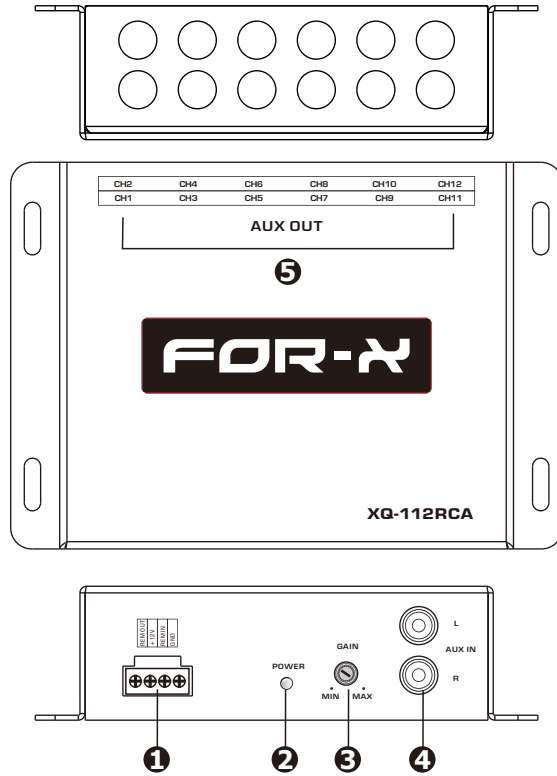

- 1.Connection Terminal
- 2.Power LED indicate
- 3.This Control adjusts the output Level.
- 4.AUX Input RCA
- 5.AUX Output RCA

## ELECTRICAL INSTALLATION

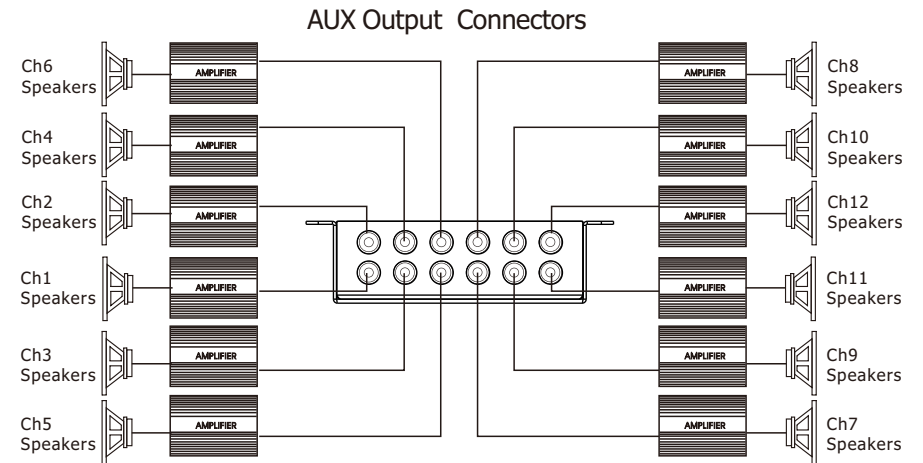

## AUX Input Connectors

