

Owner's Manual

X-400BT





App Store



Google Play

WARNINGS & PRECAUTIONS

To avoid the risk of serious injury or possible legal violations, read the following carefully before installing or making connections.

- 1. This product is designed for use on 12-volt negative ground electrical systems.
- 2. Wiring and installation should be completed by professionals.
- Be sure to disconnect the cable from the negative battery terminal when installing.
- 3. Do not set the volume of this product so high that you will not be able to hear the sounds of outside traffic and emergency vehicles.
- 4. This equipment is not allowed to drip or splash water, and no objects containing liquids are allowed to be placed on the equipment.
- 5. Only replace fuses with the correct type and value when power is removed from the unit.
- 6. To prevent short circuits, do not place or leave any metal objects (such as coins or metal tools) inside the device.

PRODUCT FEATURES

PARAMETER		
LCD: VA-LCD Display	EQ: 32 band, 8 preset	
Key Light: Multi color	Pre-Output: 4CH x 2V	
Bluetooth: Version 5.1	Max Power: 4 x 60W	
Bluetooth Music: Support	Radio: Preset 18FM	
Push to Talk: Support	Audio Format: MP3,WMA,AAC,FLAC,APE	
Charge: Front USB 2A	APP Control: iOS and Android Phone	

INSTALLATION

Installation Procedures

First complete the electrical connections and then check if they are correct.

Installation Opening

 
The unit can be mounted on any dashboard The opening is as shown in the picture below:

53mm

To Install The Car Radio

Be sure you test all connections first, and then follow these steps to install this unit.

- 1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
- Disconnect the wire harness and the antenna.
- 3. Remove the detachable panel and decorative enclosure frame and place on one side.
- 4. Insert the two brackets into the left and right sides of the chassis, as shown the following figure, and separate the chassis from the sleeve. Insert the installation sleeve into the center.
- console to be installed, and bend the clip using




- 7. Insert the car radio into the mounting sleeve.
- 8 Install decorative enclosure frame




ACCESSORY LIST

  Please check the following accessories after opening the package:










BASIC FUNCTIONS OF PANEL KEYS

	Radio Status	USB	BT Music Status
4 4 ▶ ▶	Seek a station manually	Previ	ous/Next track
1	Preset 1	Playb	ack/Pause
2	Preset 2	Intro	playback
3	Preset 3	Repe	at playback
4	Preset 4	Rand	om playback
56	Preset 5/Preset 6	Previ	ous/Next folder
⊍ા≪	Press to mute, press an hold to In call mode, short press to en		'n.
∿/SRC	Short press to switch mode functions. When a call comes in, short press to answer it (Bluetooth connection). In talk mode, tap to switch the sound channel (car speaker or headset).		
⇒ /BND	Short press the return key function in menu mode. In radio mode, short press to switch between FM1/FM2/FM3		
 ⊌IAMS	Long press to automatically search for channels in radio mode, short press to switch to voice key (requires Bluetooth connection, panel key must support this function).		
RES	(Reset function) button.	MIC	Hands-free microphone.
AUX	Auxiliary input jack.	IR	IR remote sensor.
TF	TF card slot.	USB	USB port for music playback.
USB port for charging. Note: The media USB port of this car radio also supports charging for iPhone /android mobile phone. The maximum charging ability is 5V/2.1A.			
	Volume control rotates to add and reduce sound. Short press the knob to set the menu function. Long press the knob to display the time function.		

REMOTE OPERATION



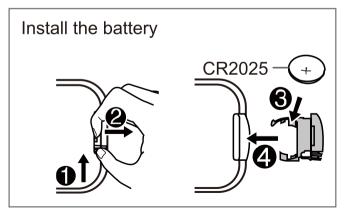

RADIO OPERTION

Start Listening

То	Operation(panel)	Remark
Auto memory	Press and hold △/BND	18FM
Band selection	Press ⇔/BND	FM1/FM2/FM3
Seek a station manually	Press I◀◀ ▶▶I	
Search the next or previous frequency step by step	Press and hold I◀◀ ▶▶I	
Store a station	Press and hold 1 - 6	

USB&TF CARD PLAYBACK

То	Operation(panel)
Track selection Fast playback	Press I◀◀ ▶▶I Press and hold I◀◀ ▶▶I
Playback/Pause	Press 1
Track pre-play	Press 2
Repeat playback	Press 3 (REPEAT ONE.REPEAT DIR.REPEAT ALL)
Random playback	Press 4 (ON/OFF)
Folder selection	Press 5 / 6

BLUETOOTH OPERATION

For the first time pairing the car MP3 with the Bluetooth of the mobile phone, please follow the steps below:

- 1.When there is no pairing, in any mode, the (19) on the LCD will flash, and the pairing can be performed at this time.
- 2. Turn on the phone's Bluetooth to search X-400BT
- 3.Click on the \dot{X} -400BTon the phone to connect. After the connection is successful, the (69) will stop flashing.
- 4. When pairing is complete,the mobile phone audio will automatically transfer to the car audio system whenever a call is made or received, or when the mobile phone plays music.

Bluetooth Basic & Music Operation

bidetootii basic & Music Operation	
То	Operation(panel)
Answer a call	Press 5/src
Switch the car horn or mobilephone handset	Press 5/skc (In a call)
End a call	Press ∪
Adjust call volume	Turn on the knob
Previous track	Press I◀◀
Next track	Press ▶►I
Playback/Pause	Press 1
Adjust call volume Previous track Next track	Turn on the knob Press I◀◀ Press ▶▶I

MENU SETTINGS

- 1.Press the knob to enter the [MENU].
- 2.Rotate the knob to select, press down the knob to enter the setting, then rotate the knob to set according to your preference, and then press down the knob to confirm the setting.

Menu Settings List

Main item	Child item	Adjustment
	PRESET EQ	NATURAL/POP/CLASS/ROCK/JAZZ/FLAT/SUPER BASS/COUNTRY/USER (User setting Adjustable frequency: 30 Hz/60Hz/8UJ210Hz/120Hz/160Hz/250Hz/400Hz/60Hz/800Hz/15KHz/15KHz/15KHz/35K/4K/5K/6K/7K/8K/9K/16K/17K/18K/14K/15K/16K/17K/18K/19K)
ALIBIO	LOUD	OFF/ON
AUDIO	BASS	BASS -7 ~ +7
	TREBLE	TREBLE -7 ~ +7
	BAL	BALAN L7-L0 0 R1-R7
	FADER	FADER R7-R0 0 F1-F7
	AUDIO RESET	NO/YES
X/OVER	F+R SET	HPF FREQ (OFF/30HZ/40HZ/50HZ/60HZ/70HZ/80HZ/ 90HZ/100HZ/120HZ/150HZ/180HZ/200HZ/250HZ/300HZ) LPF FREQ (OFF/1KHZ/1.6KHZ/2.5KHZ/4KHZ/5KHZ/ 6.3KHZ/8KHZ/10KHZ/12.5KHZ/)
01.0014	CLK FRMT	12H/24H
CLOCK	CLK ADJ	00:00
	MONO	MONO/STEREO
TUNER	DX	DX/LOCAL DX/LOCAL
	AREA	AREA EUR/USA/ASIA/RUSS
	MODE SEL	C-MODE 1/C-MODE 2/C-MODE 3
	SPECTRUM	OFF/ON
DISPLAY	ID3 TA6	OFF/ON
	VERSION	VER 3.1
	COLOR SEL	AUTO/RED/GREEN/BLUE/YELLOW/CYAN/PURPLE/WHITE. (Display the mode setting to Select C-MODE 1, The subitem will have one more color setting)

AUX INPUT

1. Connect a portable audio player(commercially available).



Portable audio player

- 3.5mm stereo mini plug with "L" shaped connector. (commercially available).
- 2.Press[\sqrt{src}]bottom to select AUX IN.
- 3. Turn on the portable audio player and start playback.

APP OPERATION

APP Download

Please go to the apple APP store or Google play store and search [AUDIO DSP Control] APP, after downloading the APP, install it on your Apple & Android devices.

APP Connection

- 1. Open the [AUDIO DSP Control] APP, click [to search for X-400BT
- 2. Click X-400BT to connect, the [11] will be red after the connect is successful.

TROUBLE SHOOTING

FAULT	REASON	SOLUTION
Not working	Fuse blown	Replace the fuse:sma10A(Red)
Not responding	System problem	Reset the unit
Can't turn on voice	Bluetooth is not connected Phone does not support voice	Connect bluetooth N.A
Not playing	Incorrect device format Device error Unsupported audio file	Reformat replacement device Replace supported audio files
Radio reception is poor	Poor contact of radio antenna Poor signal at location	Reconnect the radio antenno Change to other positions
Remote control is invalid	Remote control battery is low	Replace CR2025 battery
Bluetooth call is poor	Microphone is too far away	Speak into the microphone

Do not connect the speaker leads of the power cord to the car battery. otherwise,the unit will be seriously damaged.

Before connecting the speak leads of the power cord to the speakers, check the speaker wiring in your car.







Technical Specifications

GENERAL	
Power supply requirement	DC 12V
Maximum power output	60W x 4CH
Speaker impedance	4 - 8 Ohm
Unit dimensions(WxHxD)	178 x 82 x 50 mm
Fuse	10A

RADIO		
FM frequency range	Europe Area: 87.5 ~108.0 KHz (50KHz / Step)	
	U.S.A. Area: 87.5 ~107.9 KHz (200 KHz / Step)	
	ASIA Area: 87.5 ~108.0 KHz (100 KHz / Step)	
	RUSS Area: 65.0 ~74.0 KHz (30 KHz / Step)	
Preset	18FM	

USB / TF CARD INDEX	
Available audio formats	MP3, WMA, AAC, FLAC, APE
USB port type	2.0
USB maximum capacity	64GB
USB charging	5V/2A
Frequency response	20 Hz - 20 KHz
S/N ratio	60 dB

BLUETOOTH	
Version	Bluetooth 5.1
BT profile support	A2DP, AVRCP, HFP
Range of frequency	2.4 GHz spectrum